


# N-View OPC

# N-View OPC - OLE for Process Control Server for N-TRON Switches Transforms your HMI into a Complete Remote Network Monitoring Tool

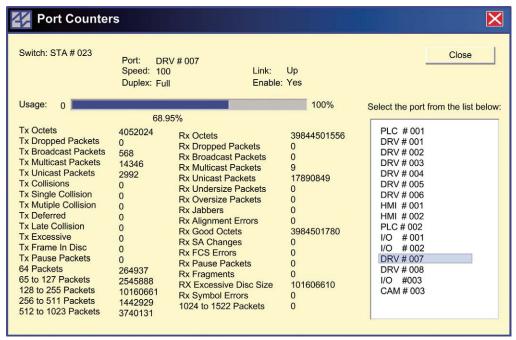

The *N-TRON*<sup>IM</sup> N-View<sup>TM</sup> OLE for Process Control (OPC) Server Software will work with industrial standard OPC Client software and most popular Human Machine Interface (HMI) packages to provide complete remote network traffic and status monitoring for *N-TRON* 200, 300, 400, 500, 700, 900, 7000, and 9000 Series Industrial Switches with the N-View Firmware. *N-TRON* Industrial Ethernet Switches offer outstanding performance, and ease of use. They are ideally suited for connecting Ethernet enabled industrial and/or security equipment requiring mission critical reliability. The N-View OPC Server in combination with one or more of our industrial switches will add complete network visibility to an HMI Control and Monitoring application.

## **N-View Switch Firmware**

*N-TRON* Switches with the N-View firmware upgrade (part numbers ending in -N) will autocast a small Ethernet packet periodically containing a port-by-port status of the switch. This information includes 5 switch level data points and 41 data points per port. This data is captured by the N-View OPC Server Software and can be displayed by application software running in the same Windows environment with OPC Client capability.

#### Ease of Use

The *N-TRON* N- View Software includes the OPC Server and a configuration software utility. The configuration software will automatically search the network for all N-View enabled switches using the unique IEEE MAC addresses to identify each switch.

The Switch MAC address can be selected and assigned a 80 character alias name. Meaningful alias names can also be added to all ports using the configuration software. The switch and port alias names can be saved and used by the N-View OPC Server as part of the switch variable names. The alias names can be used to help identify the location of the switch and the areas or equipment connected to the ports.

#### **N-View OPC Data Variables**

N-View OPC Server data variables can be accessed by most popular HMI or other application software packages with OPC client capability. These variables can be divided into three general categories.

**Status variables** indicate the operating condition of the switch or port. **Traffic variables** count the number of OCTETS (BYTES) of a specific type of ethernet packet that have passed through a port since the start of the switch. **Error variables** count the number of packet errors seen at each port since the start of the switch. N-View OPC variables are presented to the OPC Client application software as string variables. Most HMI software packages can convert these variables to the data type required for display, alarming, and trending during the data import process.

### **High Quality and Reliability**

*N-TRON* is a worldwide leader in Industrial Networking technology and offers proven reliability quality, and service.



# N-View OPC

# N-View OPC and N-View Switch Ordering Information

N-VIEW OPC CD with N-View OPC Server, N-View Configuration Software and Manual

For use with the following N-View capable *N-TRON* switches with

-N or -A extensions:

200 Series Industrial Media Converters

300 Series Industrial Media Converters and Ethernet Switches

400 Series Industrial Ethernet Switches
500 Series Industrial Ethernet Switches
700 Series Industrial Ethernet Switches

900 Series Modular Industrial Ethernet Switches

7000 Series Industrial Ethernet Switches 9000 Series Industrial Ethernet Switches

See Individual Series for specific ordering information.

# **N-View Variable Specifications**

## **N-View Switch Variables**

Switch Alias User Assigned Alias Name

Switch Status Online/Offline

Switch Last\_Update Seconds since last unicast update

Switch MAC\_Address Switch MAC Address

Switch Total\_Ports Total number of ports on switch

#### **N-View Port Status Variables**

Port Alias User Assigned Port Alias Name

Port Duplex Half / Full / NA
Port Link\_Status Up / Down
Port PortId 1 to 24
Port Speed 10 / 100 / NA
Port Usage 0.00 to 100%
Port\_Enable/Disable On / Off

# **N-View Port Traffic Variables**

Port pkts_64_octets	BYTE Count from Start
Port pkts_65to127_octets	BYTE Count from Start
Port pkts_128to255_octets	BYTE Count from Start
Port pkts_256to511_octets	BYTE Count from Start
Port pkts_512to1023_octets	BYTE Count from Start
Port pkts_1024to1522_octets	BYTE Count from Start
Port rx_octets	BYTE Count from Start
Port rx_good_octets	BYTE Count from Start
Port rx_broadcast_pkts	BYTE Count from Start
Port rx_multicast_pkts	BYTE Count from Start
Port rx_unicast_pkts	BYTE Count from Start
Port rx_pause_pkts	BYTE Count from Start
Port tx_octets	BYTE Count from Start
Port tx_collisions	BYTE Count from Start
Port tx_multiple_collision	BYTE Count from Start

Port tx_single_collision	BYTE Count from Start
Port tx_broadcast_pkts	BYTE Count from Start
Port tx_multicast_pkts	BYTE Count from Start
Port tx_unicast_pkts	BYTE Count from Start
Port tx_pause_pkts	BYTE Count from Start

#### **N-View Port Error Variables**

BYTE Count from Start
BYTE Count from Start

# **Minimum System Requirements**

250MHz Pentium PC, 64MB RAM, 2G Hard Drive, CD Drive, Mouse, VGA Monitor, NDIS compatible Ethernet Card, Internet Explorer 6 or greater, Windows NT 4.0 w/SP4 or later, Windows 2000, XP, Vista or Windows 2003 Server, Administrator Privileges

# **Contact Information**



6255 PRESCOTT COURT • CHINO, CA 91710 909-465-1174 • FAX 909-465-1178 www.pacificparts.com

Electrical Supply Distributor

REV 080618